



Sony D-822K Car Discman Teardown

Written By: modem21



INTRODUCTION

I'm going to dissect an old friend, my first disc player. It is hoped that this teardown, while exposing the hydro-suspension and green-amber lighting, will reveal an awesomeness worthy of a Sony PS3 Slim (Gadget Lab Contest).



TOOLS:

- [jumper puller](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Sony D-822K Car Discman Teardown






- Obtain a D822-K Discman and remote. True, it has DSP and Surround Sound, but the 90's have come and gone. It's okay to take it apart.

Step 2




- Position unit so that the bottom is facing up. Remove the 6 screws.
- Hold top and bottom of unit together as you turn the unit over, bottom facing down. Use caution; the upper and lower case, along with circuit board are now loose.
- Watch out for the AVLS and illumination switches, they love to disappear when unsupervised. Remove top of case.

Step 3

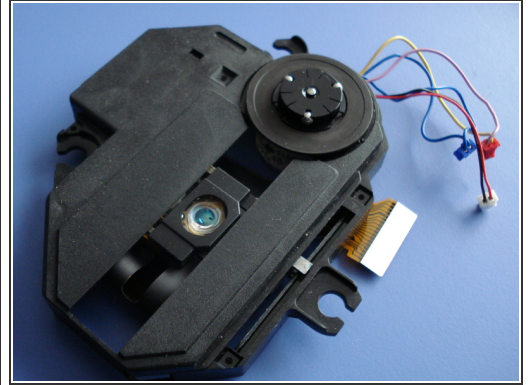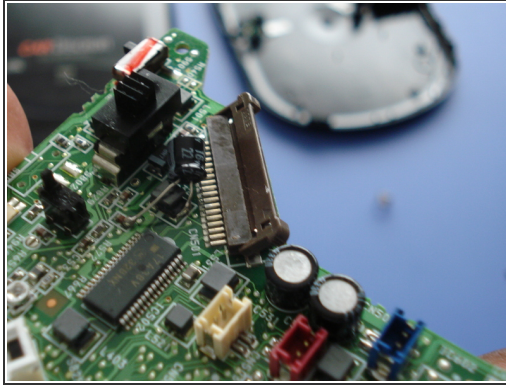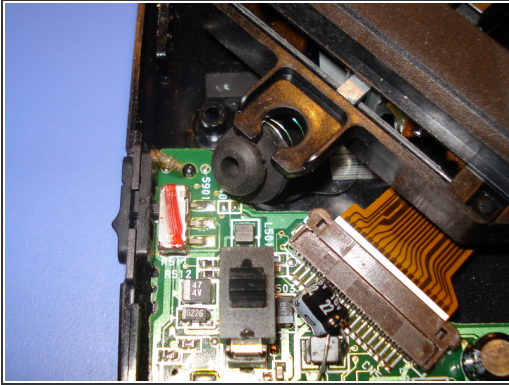


- Removing the CD reader: Gently pull all 3 rubber grommets sideways, away from the CD reader.
- Slide edge of ribbon cable connector towards ribbon cable to disengage.
- Unplug the red, white, and blue plugs from the circuit board.

Step 4

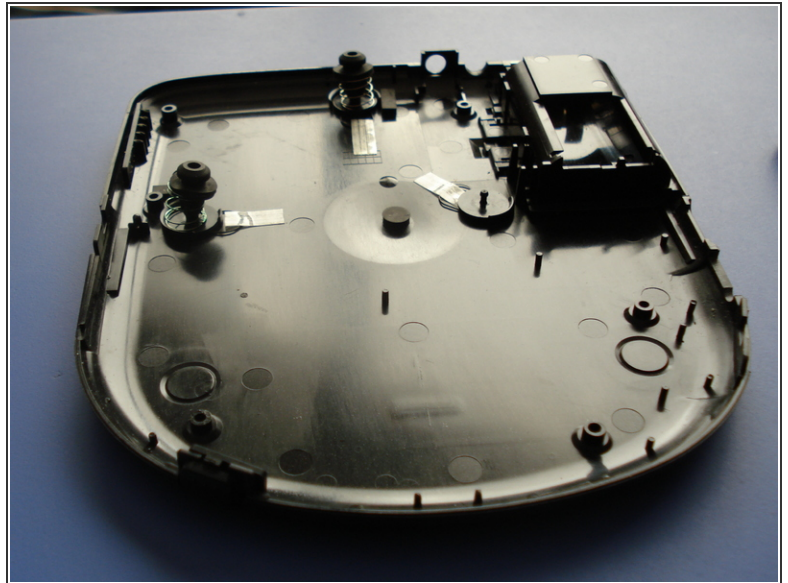


- Observation: This is the Hydro Suspension system...really.

Step 5

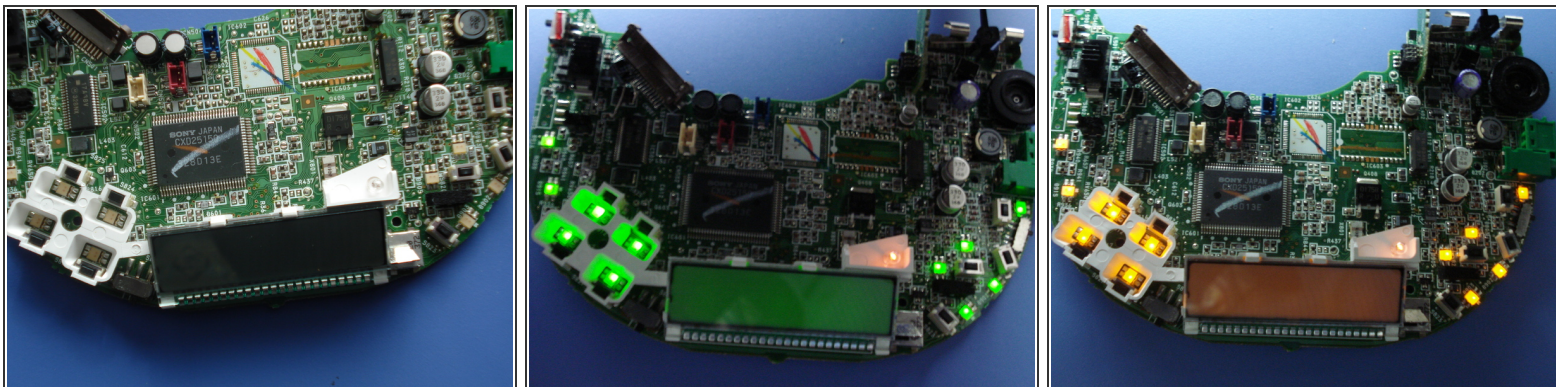


- Remove circuit board
- Notice the dual-color light modules. (I temporarily connected the power to show off the lights)

Step 6

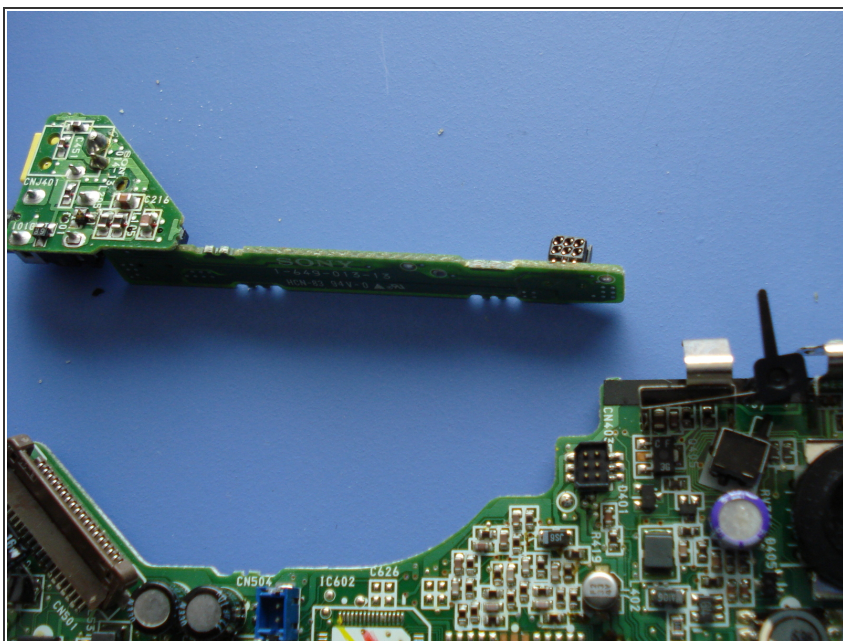

- Disconnect tailpiece, and power supply.

Step 7

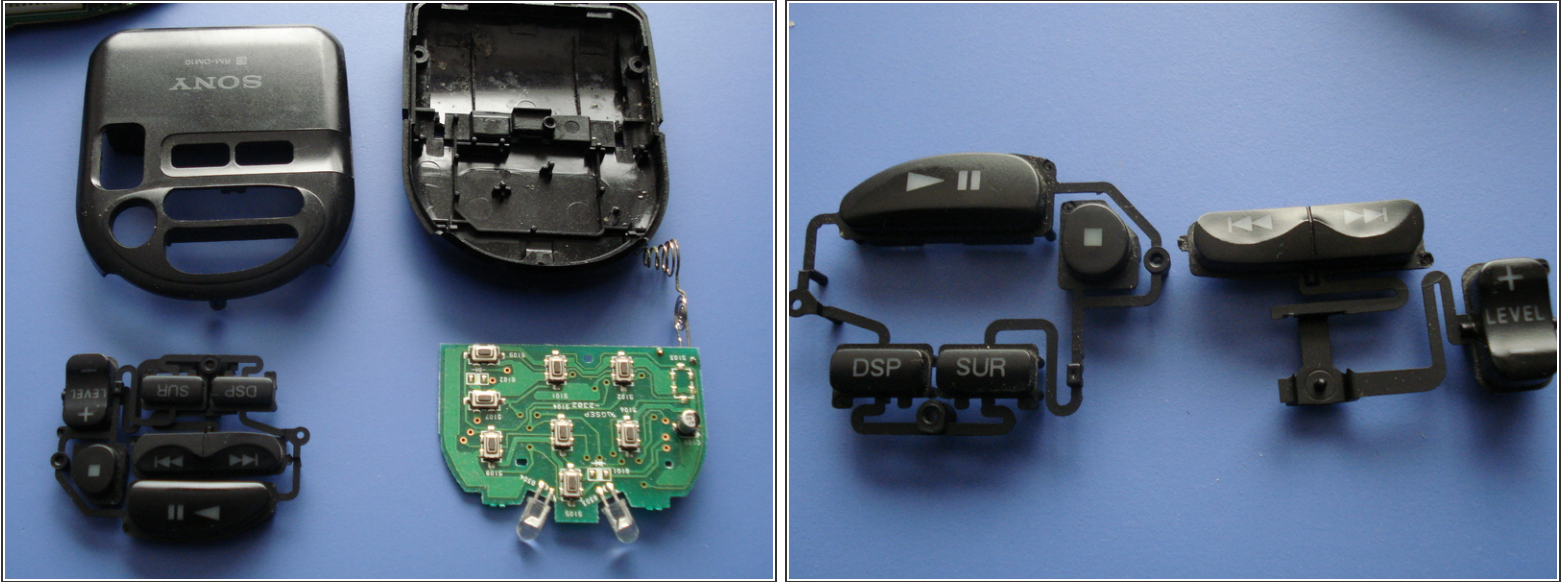

- Remote: Remove the 3 screws from the bottom. Pull apart.
- The function buttons have a neat overlay design.

Step 8



- Completely disassembled. The illumination button was lost for two weeks after reassembling... but who uses amber lights anymore?

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 02:57:20 PM.